





Handguard Installation Accessories List

Model: CHS081

Applicable Model: BMW F850GS (2018-) BMW F850GS ADVENTURE (2019-)
 BMW R1200GS (2013-) BMW R1200GS ADVENTURE (2014-)
 BMW R1250GS (2018-) BMW R1250GS ADVENTURE (2019-)
 BMW R1300GS(2023-)

<p>①</p>  <p>Quantity: 1 pc</p> <p>Left Guard Plate</p>	<p>②</p>  <p>Quantity: 1 pc</p> <p>Right Guard Plate</p>	<p>③</p>  <p>Quantity: 1 pc</p> <p>Left Guard Bow Anti-Skid Block</p>	<p>④</p>  <p>Quantity: 1 pc</p> <p>Right Guard Bow Anti-Skid Block</p>	<p>⑤</p>  <p>Quantity: 1 pc</p> <p>Left Guard Bow Buffer Pad</p>	<p>⑥</p>  <p>Quantity: 1 pc</p> <p>Right Guard Bow Buffer Pad</p>	<p>⑦</p>  <p>Quantity: 2 pcs</p> <p>Protection Terminal</p>
<p>⑧</p>  <p>Quantity: 2 pcs</p> <p>Terminal Aluminum Sleeve</p>	<p>⑨</p>  <p>Quantity: 1 pc</p> <p>Left Guard Bow Bracket</p>	<p>⑩</p>  <p>Quantity: 1 pc</p> <p>Right Guard Bow Bracket</p>	<p>⑪</p>  <p>Quantity: 2 pcs</p> <p>Guard Bow Clamp</p>	<p>⑫</p>  <p>Quantity: 2 pcs</p> <p>Outer diameter: 20mm Inner diameter: 10.5mm Height: 8.5mm</p>	<p>⑬</p>  <p>Quantity: 2 pcs</p> <p>M10×55 Torque: 25N·m</p>	<p>⑭</p>  <p>Quantity: 2 pcs</p> <p>M8×25 Torque: 20N·m</p>
<p>⑮</p>  <p>Quantity: 6 pcs</p> <p>M4×10 Torque: 1.5N·m</p>	<p>⑯</p>  <p>Quantity: 1 pc</p> <p>Screw Glue</p>	<p>Note:</p> <ol style="list-style-type: none"> 1. Please read the user manual carefully before installation. 2. When installing each component, do not fully tighten the screws initially. After all components are in place, apply an appropriate amount of thread locker and then tighten all screws. Be sure to follow the torque requirements for each screw (as detailed in the accessories list above). 3. Regularly inspect the fastening screws of all components. 				







Scan QR Code To Watch
The installation Video

Handguard Installation Instructions 1

Applicable Model: BMW F850GS (2018-)
BMW R1200GS (2013-)
BMW R1250GS (2018-)
BMW R1300GS(2023-)

BMW F850GS ADVENTURE (2019-)
BMW R1200GS ADVENTURE (2014-)
BMW R1250GS ADVENTURE (2019-)

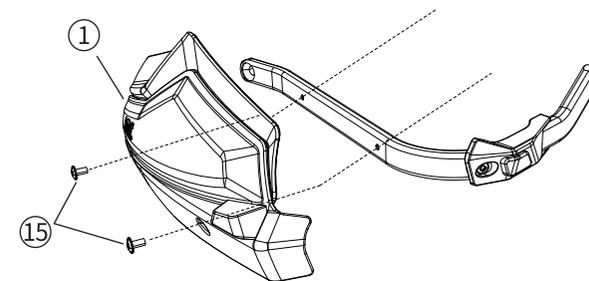
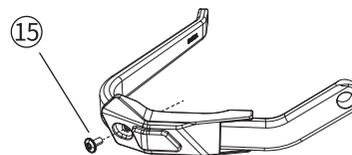
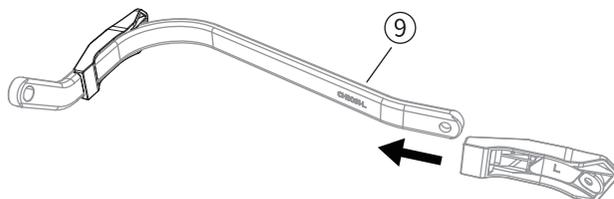
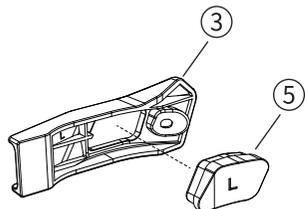


1. Install Part ③ and Part ⑤.

2. Once Part ③ and Part ⑤ are installed, secure them to the correct positions as shown in the diagram above.

3. Apply an appropriate amount of threadlocker on the threads of Part ⑮, then tighten.

4. Apply an appropriate amount of threadlocker on the threads of Part ⑮, then tighten.

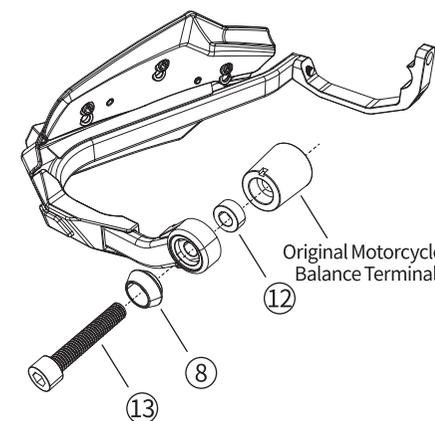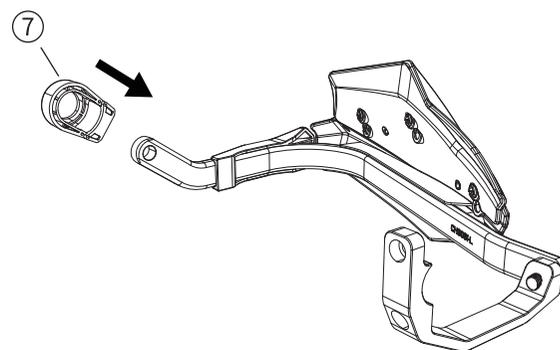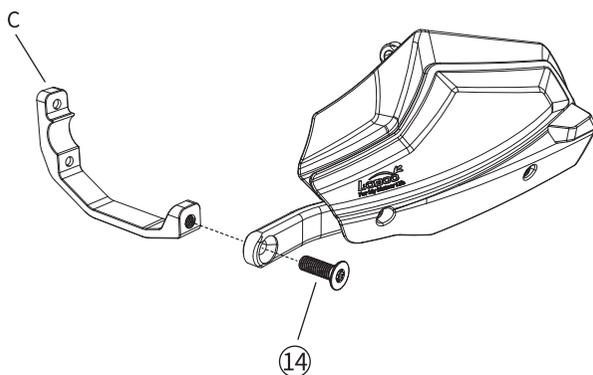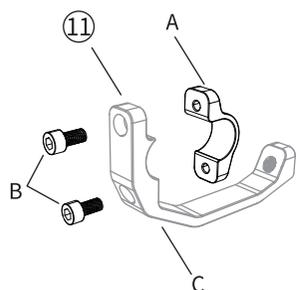

5. Remove Part ⑪.

6. Apply an appropriate amount of threadlocker to the threads of Part ⑭, then fix Section C of Part ⑪ and Part ⑭ to the position shown in the diagram above. Do not fully tighten yet.

7. Install Part ⑦ at the position indicated in the diagram.

8. Part ⑬ does not require threadlocker.

9. Remove the screws and mirrors in the green circled area and detach the original handguards.



10. Attach Section A of Part ⑪ to this position. If it does not fit, loosen the screws in the green circled area before proceeding.



Mount the LOBOO Motorcycle Handguards onto the handlebar, adjust them to the desired angle, and tighten the screws.
Note: Apply an appropriate amount of threadlocker to the threads of Section B of Part ⑪ (Torque: 10 N·m).



When tightening screws, follow the specified torque values to avoid thread stripping, breakage, or other damage.